

4. RADIO OVERVIEW

4.1 Status Indications

The top LED will help you to identify the current radio status.

LED Indication	Status
Flashes Red	Low battery voltage
Constant Red	Transmitting
Constant Green	Analog Receiving
Constant Cyan	Digital Receiving
Flashes Green	Scan

4.2 Programmed Key

It is possible to set different functions for [PF1], [PF2], [PF3], **[P1]**, **[P2]** keys.

Method 1: In radio Menu - Settings - Radio Set - Key - PF1, PF2, PF3, P1,P2.

Method 2: In PC software - Public - Optional Setting - Key function.

OFF	No Function
Volt	Check the current battery capacity voltage
Tx Power	Switch the power between super high, high, middle and low power.
TalkAround	Switch between Talk Around and Repeater mode
Reverse	Turn on/off the frequency reverse function.
Digi Encrypt	Choose the digital encryption group for digital channel
Call	In Analog mode, send the DTMF/5TONE/2TONE encode. This function is only valid for analog channel.
VOX	Set up the VOX level
VFO / MR	Switch between VFO mode and memory channel mode.
Sub PTT	Sub channel PTT, press to start the call on sub channel (NOTE: On PF1 - PF2 - PF3 Keys Only)
Scan	Scan on/off
FM Radio	FM radio on/off
Alarm	Long press the key to start alarm, short press again to exit the alarm.
Record Switch	Enable/disable the recording function
Record	Start/stop recording. When stop recording, the radio will remind repeat or send the record.
SMS	In digital mode, press to enter into SMS messages
Dial	Start the manually dial
GPS Info	Check the GPS position information