

## 5. BASIC OPERATIONS

(3) Different Color Code: The radio can transmit if the channel is free, but the color code is mismatch.

(4) Same Color Code: The radio can transmit only if the channel is free and the color code matches.

### 5.7 New channel

(1) Press  (Menu) to enter main Menu.

(2) Select "Settings".

(3) Select "Chan Set".

(4) Select "New Chan".

(5) Input the channel number by keypad, press  to confirm.

(6) Select a zone from zone list, then Confirm To Save. The radio will start channel saving, and saving is completed when it displays "Saved".

(7) Now select the new channel in the radio and go to Channel Settings menu to set up all the new channel's parameters.

Fast saving a new channel:

**Note:** Hold  (Menu) until displays "Next Please Press Dial Key", then press [P1] key to start a new channel from above step 5.

### 5.8 Delete Channel

(1) In channel (MR) mode, press  (Menu) to enter main Menu.

(2) Select "Settings".

(3) Select "Chan Set".

(4) Select "Delete Chan" to delete current channel.

Fast delete a channel:

**Note:** Hold  (Menu) until displays "Next Please Press Dial Key", then press [P2] key to delete current channel.

### 5.9 Receiving and Responding to a Radio Call

When the radio is in the digital mode, it can receive and respond to a call with the same frequency/color code/ slot. When receiving a call:

**a.** If the radio is programmed with callers DMR ID number in the digital contact list, when receiving a call, the radio will ring or vibrate briefly.

**b.** The blue LED lights up.

**c.** The left top corner of LCD shows the **RSSI** icon, and the LCD display will show DMR ID/name/city/state/country/call type and incoming icon based on what is in the contact list.