

## 5. BASIC OPERATIONS

When the function is on, the radio will start an alarm if the radio is falling to the ground. Raise the radio to stop the alarm.

**Note:** When GPS is on and positioning successfully, it will auto send out the GPS information when the radio starts the alarm.

### 5.14 Battery Voltage Test

Press the key programed as Voltage function to check the current battery voltage, press this key again to return.