

## 7. MAIN MENU FUNCTIONS

### 3) Edit Scan List Name

Select "Edit Name". Input or revise the name and press confirm to store.

### 4) Store List

### 5) Delete Channel from Scan List

Select "Channel X", then select "Delete CH" to remove it from scan list.

### 7.5.3 Add Scan List

a. Press  (Menu) to enter the main Menu.

b. Select "SCAN".

c. Select "Scan List".

d. Select "Add Scan List"

e. Select "Add Chan", to add wanted channels into new scan list.

f. Select "Edit Name", input the name and confirm.

g. Select "Store List" to save new list.

### 7.6 Roaming

Roaming function enable users to search the roaming channel list by a programmed time interval and lock on the repeater with strongest signal.

#### (1) Roaming On/Off

Allow you turn on the roaming manually. After the roaming is finished, it will return to the off state. **\*\* Manually Roaming is a onetime action only.**

#### (2) Roaming Zone

Select **Roam Test Zone**: select a Roaming Zone from the list to set it as active zone. You can also scroll down the list of Zones and select Add Channel to add a new channel to the current Roaming Zone and set the parameters.

Select **Add Channel**: Add a new roaming channel to the current zone.

**New Roam Ch**: Allows you modify the RX frequency/TX frequency/CC/TS/CH name for the roaming channel. Also allow you remove the roaming channel from the zone.

**Edit Name**: Edit the zone name.

**Select Zone**: Select the roaming zone for current channel.

**Delete Zone**: Delete the roaming zone from the current channel.

#### (3) Auto Roaming settings

Set the fixed time waiting interval to begin automatic roaming when the repeater cannot be found, roaming will begin at the end of this time.

**Fixed Time Set**: The roaming will be started at preset fixed time or set to off.