

7. MAIN MENU FUNCTIONS

Start Roaming:

Fixed Time: Starts timed roaming

Out of Range: The roaming will be started when the radio cannot find a repeater - "The repeater is out of range" icon will appear 3 times, then the radio will perform roaming one time, and return to roaming off automatically.

(4) Repeater Check - Off / On

Turn on this function will allow the radio to check the repeater status, the "Repeater is out of range" icon shows if the repeater is not in range.

7.7 Settings

7.7.1 Radio Set

(1) Beep

Beep On: The radio will beep when you press the keypad

Beep Off: No beep when you press the keypad.

(2) Back Light

LCD backlight intensity is adjustable in 5 steps

(3) Light Time

Always: The backlight is always on.

5S-5Min adjustable.

Note: This function is valid when turn off the power save.

(4) Ch. Name

CH name: The radio will work in channel mode and display the channel name, and then the programmed VFO/ MR key is not valid.

Frequency: The radio will work in VFO mode and display the frequency, which allows the programmed VFO/MR key to switch the VFO and Memory channels.

(5) Key Lock

Manual Lock: Long press the  key to lock the keypad. Press Func key, then press the  key to unlock the keypad.

Auto Lock: Radio will auto lock the keypad when standby for a while. Press [Func] key, then press the  key to unlock the keypad

(6) Auto Power Off

Allow to set automatic power off when not used for a period of 10 minutes, 30minutes, 1 hour or 2 hours of inoperation.

Off: Turn off the function.