

## 7. MAIN MENU FUNCTIONS

Channel B: The lower displayed channel will be set to become the main channel.

### (17) Sub Ch Off

Sub Channel On: Turns on the sub channel, and the radio will display both channel.

Sub Channel Off: Turns off the sub channel, and the radio will display the main channel only

### (18) SMS Prompt

Different prompt options when receive a new message.

### (19) Call Ring

Different prompt options when receive a new call.

### (20) Freq Step

2.5K,5K,6.25K,10K,12.5K,20K,25K,30K,50K, total of 9 frequency steps.

### (21) Ana SQ Level

Adjusts the squelch level to receive signal with different signal strength, and a total of 5 levels offered. This function is only valid for analog channel.

### (22) Power Save

Turn on the function to extend the battery life.

Save 1:1, work 30ms, dormant 30ms.

Save 2:1, work 60ms, dormant 30ms

When turn on the power save, it may not receive the message in time.

### (23) TBST Sel

TBST frequency is used to activate some dormant repeaters, 1000Hz, 1450Hz,1750Hz, 2100Hz a total of 4 options are offered.

Press PTT and PF1 key together to transmit the TBST tone.

### (24) VOX

Enable the VOX, you can speak into the microphone to start transmitting instead of pressing the [PTT] key. A total of 3 levels are provided.

### (25) VOX Delay

When the VOX is enabled, set up the VOX delay to help to extend the transmission time to avoid stopping a transmission too early. 0.5s-3s, a total of 26 times offered.

### (26) Scan Mod

**SCM TO:** When scanning and stopping for a signal, stays at the channel 5s before resuming the scan.