

7. MAIN MENU FUNCTIONS

SCM CO: When scanning and stopping for signal, stays at the channel until the signal disappears, and resumes scan 2s later.

SCM SE: When scanning and stopping for a signal, will terminate the scan. This function is only valid for a VFO scan.

(27) Mic Level

Allows to adjust the Microphone gain, level 1 is the lowest, level and 5 is highest gain.

(28) DTMF Speed

Offers DTMF encode speed which will help the receiver decode successfully, 50~500ms are the options.

(29) FM Radio

Turn on or off the FM radio.

(30) FM Radio Moni

Radio Mon On: When FM radio is used, you can still receive or transmit on the channel.

Radio Mon Off: When FM radio is used, the radio will not permit a transmission or reception.

(31) Man Down Alarm

When the function is on, the radio will start alarm if the radio is falling to the ground. Raise the radio to stop the alarm.

When GPS is on and positioning successfully, it will auto send out the GPS information when the radio starts the alarm.

(32) Start Up Pwd

On: Set up the password for start up. You need to input the password to power on the radio.

Off: No password is required for the radio power on start up.

The password shall be set up in CPS-Optional Setting-Power on-Power-on Password Char.

(33-34) AuRepeater A or B (For VFO A or B)

Turn on the Auto Repeater function, the TX frequency in VFO mode will auto increase or reduce frequency base on the set up offset frequency in CPS.

Off: Turn off the function.

Positive: TX frequency= RX frequency + Offset frequency.