

## 7. MAIN MENU FUNCTIONS

Negative: TX frequency= RX frequency - Offset frequency.

### (35-44) Key PF1, PF2, PF3, P1, P2

You can program these keys for different functions.(Refer to page 10 & 11)

### (45) SMS Format

M-SMS: Allows SMS text communication with Motorola DMR radio.

H-SMS: Allows SMS text communication with Hytera DMR radio.

### (46) Time Zone

Set up the time zone of your location.

### (47) Date Time

**Time Set:** Allows to set up the date and time manually. Use the  /  key to set the current year. Move to the month by pushing the **[P1]** key. Set the month, and use the **[P1]** key to move forward each step. Once done, click the Menu key to save the date and time.

**GPS Check:** When GPS is positioning successfully, enter this menu, select GPS check to do the date & time correction automatically.

### 7.7.2 Chan Set

Channel set menu Route: Main Menu- Settings - Chan Set. The channel set menu will change accordingly to the channel type. When the channel type is digital, it will automatical hide the analog menus..

#### ※Chan Set (Digital Channel)

##### (1) New Chan

Allows creat a new channel and save current set up to the new channel.

- Select "New Chan", then input new channel number and confirm.
- Input channel name and confirm.
- Select a zone and confirm. The new channel will be saved to the selected zone.

##### (2) Delete Chan

Allows to delete current channel.

- Select "Delete Chan",the radio will remind " Delete? "
- press confirm, the current channel will deleted.

**Note:** After delete one channel, the radio will move to next channel.

##### (3) Channel Type

A-Analog : Set up to analog channel