

## 7. MAIN MENU FUNCTIONS

 **NOTE** » If the GPS is not positioning, it will display “No Fixed Position”, and the GPS icon shows a grey color. Move the radio to an open window or outdoors, and it will take a few minutes to connect to the GPS Satellites.

### 7.9.3 Send GPS Information

- a. When the GPS is positioning successfully, the GPS icon shows a red color. Follow the above step to check the GPS info, press edit key to Text edit.
- b. Press Confirm, and it will display Send or Save. If you select Save, the GPS info will be saved as a draft message.
- c. Choose Send and it will display Contact list or Manual Dial.
- d. Select Contact list to choose a contact, press select to send the GPS info. or
- e. Select Manual Dial, input the DMR ID, press **#1** key to switch group ID or private ID, press **☐** to send the GPS info.

### 7.10 APRS Location Reporting(Supported by GPS)

#### (1) Upload Type

None: No APRS.

Sel A Aprs: Select analog APRS.

Sel D Aprs: Select DMR APRS.

#### (2) Ana APRS

**PTT Upload:** Set the PTT transmit method.

- Off: Not transmit APRS.
- Tx Start: Transmit analog APRS when press the PTT.
- TX End: Transmit analog APRS when release the PTT.

**Upload Power:** Set the transmit power.

**Upload frequency:** Set the transmit frequency.

**Upload text:** Set the text to be shown on aprs.fi

#### (3) Digi APRS

**PTT Upload:** Set the PTT transmit method.

- Off: Not transmit APRS.
- On: Transmit DMR APRS when release the PTT.